



Leave your mini cask in a cool place (10-12C) out of direct sunlight.
Place the mini cask in the position from where you intend to serve the beer.
Do not disturb the mini cask for at least 6 hours. (this allows the natural sediment to settle below the level of the tap)
Once the beer has been allowed to settle you cannot move the mini cask To a second location for serving.
Do not drink ale or open cask before ale has been allowed to settle.



Place the rubber ring in the hole, this will act as a seal with tap



Place tape in the hole with the seal, ensure the tape is in the off position, and knock in tap in with rubber or wooden mallet

The tap acts as a vent and releases the pressure To serve turn the top tap a quarter turn anti-clockwise.
When you have finished serving close the vent tap – this helps to keep the beer in good condition.



If you have party keg with this type of top simply slid the plastic release screw over the top of the metal valve, and proceed by turning the screw, this will release the pressure.



For the pouring tap repeat the above process

Do not tip the cask to speed up serving as this will disturb the sediment

ENJOY!

GENERAL INFORMATION

Once the tap has been opened your beer should last for at least 5 days if it is kept in optimum condition at around 10-12C/54F.

If the mini cask is moved you must allow another 6 hours settling time.

The beer may be "lively" on opening due to natural CO₂ build up within the mini casks. This may mean that on opening the top vent (instructions above) the ale may fizz out the top vent due to the pressure build up.

If this happens open the serving tap at the bottom to release some of the ale and start circulation.